


# WEB BOARDS, LLC

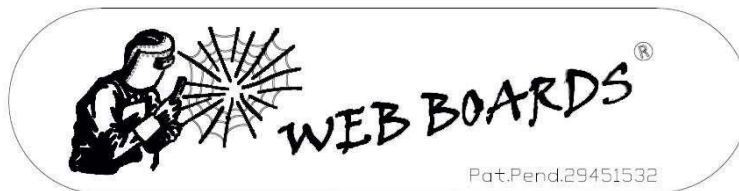

33 FISHERVILLE ROAD, CONCORD N.H. 03303

TEL: 603-228-6617 FAX: 603-228-6545

*Thank you for choosing Web Boards, LLC.*

*We appreciate your business!*

[www.web-boards.net](http://www.web-boards.net)

## **Passenger WEB BOARDS®**

### Installation Instructions

#### **PASSENGER FOOT REST REMOVAL**

⚙️ Remove the two existing bolts from the underside of the foot rest using a 9/64 allen wrench. The rubber pads can now be removed from the boards.

#### **.INSTALL YOUR PASSENGER WEB BOARDS ®**

⚙️ Place the stainless steel shim into the recessed edge of the foot rest.

⚙️ Set the passenger WEB BOARDS ® with the web towards the rear of the bike. There is a left and right board.

⚙️ Thread the Nylok nut onto each threaded stud (underneath the foot rest) and secure with a 3/8" wrench.

#### **HARDWARE INCLUDED**

⚙️ 2 - Passenger WEB BOARDS®

⚙️ 2 - 10/32 Nylok nuts

⚙️ 2 - Stainless steel washers

⚙️ 2 - Stainless steel shims