


# WEB BOARDS, LLC

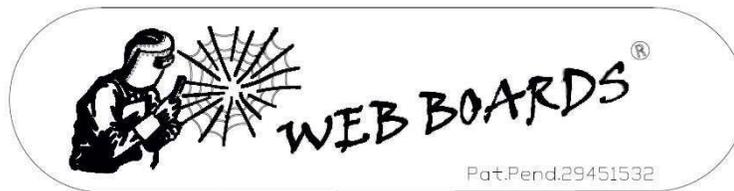

33 FISHERVILLE ROAD, CONCORD N.H. 03303

TEL: 603-228-6617 FAX: 603-228-6545

*Thank you for choosing Web Boards, LLC.*

*We appreciate your business!*

[www.web-boards.net](http://www.web-boards.net)

## **ST (with Pegs) Installation Instructions**

### **FOOT PEG ADJUSTMENTS**

(🔧) Unbolt and remove both black rubber foot peg pads. (riders)

### **INSTALL your WEB BOARDS ®**

(🔧) If your passenger foot rests are already located on the top slots you do not have to make any adjustments to install your WEB BOARDS ® however, if your passenger foot rests are located in the bottom slots, loosen the slide bolts and move the foot rests to the top slots. Please note that you may re-adjust the foot rests to the desired height and securely re-tighten the slide bolts ***AFTER*** the installation of your WEB BOARDS ®.

(🔧) Set the WEB BOARDS ® on the rider's pegs. Align the holes of the rear mounting brackets with the bottom slots to the passenger foot rests and insert the ½-13 s/s 3/16 x 1-1/2" carriage bolts. (leave loose for now)

(🔧) Align the holes on the on the riders pegs with those in the center of the WEB BOARDS®, and securely bolt in place using the ¼-20 s/s 3/16 x 2" bolts, with Nylok nuts.

(🔧) Once you have aligned the WEB BOARDS®, to the proper position, making sure they are not rubbing or touching anywhere on the inside edges, at the rear mounting location near the passenger foot rest, **TIGHTEN** the carriage bolt **SECURLEY**.

**\*\* We recommend that you periodically check all nuts and bolts, to ensure they are tightened securely\*\***

## **HARDWARE INCLUDED**

⚙️ 2 - 1/2-13 s/s 3/16 Carriage bolts x 1-3/4" long with Nylok nuts

(Used to install WEB BOARDS® in lower slot of passenger foot rests)

⚙️ 4 - 1/4 -20 s/s 3/16 Flat Head socket cap bolts x 2" long with Nylok nuts

(Used to install WEB BOARDS® to riders pegs)